

# List of vehicles with approved installation kits – 4-point WTORS

Vehicle make	Vehicle model	Shoulder belt anchorage position	Floor mount type	Up to 85 kg - CLASSIC Line	Up to 85 kg - EVOLUTION Line	Up to 170 kg - HEAVY DUTY Line	Up to 200 kg - HEAVY DUTY Line
Citroën	Berlingo Tripod/Allied Floor Conversion	RD			503463	503462	503464
	Jumper Y	C	surface	502057	503170	503136	503135
		C	flush	502058	503171	503497	503488
		W	surface	501945	503483		
		W	flush	501944	502111		
	right side	RD	surface		503736	503623	503604
	right side	RD	flush		503738	503603	503624
	left side	RD	surface		503739	503602	503625
	left side	RD	flush		503737	503622	503605
	Jumpy X	C	surface	502057	503170		
		C	flush	502058	503171		
		W	surface	501949	501057		
		W	flush	501948	501055		
		RD	surface	501771	503293		
		RD	flush	501799	503294		
	Space Tourer/Jumpy KO 2017-	C	surface		503296	503473	503472
		C	flush		503295	503475	503474
		RD	surface	501771	503293	503297	503299
		RD	flush	501799	503294	503298	503300
	Space Tourer/Jumpy KO 2017- Freedom Drop Floor Conversion	C (roof)	surface			503664	
Fiat	Doblo High roof SWB&LWB	D	rail	502311	503312		
		D	rail	502317	501869		
		D	surface		502373	503480	503560
		D	flush		502372	503561	503562
	Ducato X250	C	surface	502057	503170	503136	503135
		C	flush	502058	503171	503497	503488
		W	surface	501945	503483		
		W	flush	501944	502111		
	right side	RD	surface		503736	503623	503604
	right side	RD	flush		503738	503603	503624
	left side	RD	surface		503739	503602	503625
	left side	RD	flush		503737	503622	503605
	Scudo X270	C	surface	502057	503170		
		C	flush	502058	503171		
		W	surface	501949	501057		
		W	flush	501948	501055		
		RD	surface	501771	503293		
		RD	flush	501799	503294		
	Talento	C	surface	502057	503170	503136	503135
		C	flush	502058	503171	503497	503488
	D	surface	502057	503170	503136	503135	
	D	flush	502058	503171	503497	503488	
Ford	Transit Custom V362	C	surface	502057	503170		
		C	flush	502058	503171		
		W	surface	501947	503486	503136	503135
		W	flush	501946	503487	503497	503488
		D	surface	502057	503170	503136	503135
		D	flush	502058	503171	503497	503488
		RD	surface	501771	503293		
		RD	flush	501799	503294		
	Transit V363	C	surface	502056	501054		
		C	flush	502055	501053		
		W	surface	502060	501051		
		W	flush	502059	501050		
		D	surface	502057	503170		
		D	flush	502058	503171		
MAN	TGE 2017-	C	surface	503162	503133	503490	503496
		C	flush	503163	503131	503489	503493
		W	surface	503164	503132	503491	503494
		W	flush	503163	503130	503492	503495
		D	surface	502057	503170	503136	503135
		D	flush	502058	503171	503497	503488
		RD	surface		500114	500116	500118
		RD	flush		500115	500117	500119

SYMBOLS: C = c pillar / D = d pillar / W = window / RD / rear door / surface = surface mount / flush = flush mount / rail = floor rail

# List of vehicles with approved installation kits – 4-point WTORS

Vehicle make	Vehicle model	Shoulder belt anchorage position	Floor mount type	Up to 85 kg - CLASSIC Line	Up to 85 kg - EVOLUTION Line	Up to 170 kg - HEAVY DUTY Line	Up to 200 kg - HEAVY DUTY Line	
Mercedes	Sprinter 906 & 907 & 910	C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		W	surface	501679	503482			
		W	flush	501932	503484			
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
		RD	surface		500114	500116	500118	
		RD	flush		500115	500117	500119	
		Sprinter 906 & 907 High roof, wheel base 3250-3665-4325	W	surface	502063	500726		
			W	flush	502062	500729		
		Vito & V-Class W447	W	surface	502241	503485		
			W	flush	502239	503524		
			RD	surface	501771	503293		
			RD	flush	501799	503294		
		Vito 639 & V-Class W447	C	surface	502057	503170	503136	503135
			C	flush	502058	503171	503497	503488
		W	surface	501821	501789			
		RD	surface	501771	503293	503297	503299	
		RD	flush	501799	503294	503298	503300	
		RD	surface		503358			
		RD	flush		503357			
Nissan	Nissan NV 200	W	surface	501947	503486			
		W	flush	501946	503487			
		RD	surface		503187			
	Nissan NV 300	C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
	Nissan NV400	C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		W	surface	501942	501885			
		W	flush	501943	501886			
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
	Nissan Primastar	C	surface	502057	503170			
		C	flush	502058	503171			
D		surface	502057	503170				
	D	flush	502058	503171				
Opel	Combo High roof SWB&LWB	D	surface		502373	503480	503560	
		D	flush		502372	503561	503562	
		D	rail	502311	503312			
		D	rail	502317	501869			
	Movano X62	W	surface	501942	501885			
		W	flush	501943	501886			
		C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
	Vivaro X82	C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
	Vivaro X83	C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
Zafira Life	C	surface		503296	503473	503472		
	C	flush		503295	503475	503474		
	RD	surface	501771	503293	503297	503299		
	RD	flush	501799	503294	503298	503300		
Zafira Life - Freedom drop floor conversion	C (roof)	surface			503664			
Peugeot	Boxer Y	C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		W	surface	501945	503483			
		W	flush	501944	502111			
	right side	RD	surface		503736	503623	503604	
	right side	RD	flush		503738	503603	503624	
	left side	RD	surface		503739	503602	503625	
	left side	RD	flush		503737	503622	503605	
	Expert X	C	surface	502057	503170			
		C	flush	502058	503171			
		W	surface	501949	501057			
		W	flush	501948	501055			
		RD	surface	501771	503293			
		RD	flush	501799	503294			
		Partner Tripod/Allied floor conversion	D	surface		503463	503462	503464
		Traveller/Expert KO 2017-	C	surface		503296	503473	503472
		C	flush		503295	503475	503474	
		RD	surface	501771	503293	503297	503299	
	RD	flush	501799	503294	503298	503300		
Traveller/Expert KO 2017- Freedom Drop Floor Conversion	C (roof)	surface			503664			


SYMBOLS: C = c pillar / D = d pillar / W = window / RD / rear door / surface = surface mount / flush = flush mount / rail = floor rail

# List of vehicles with approved installation kits – 4-point WTORS

Vehicle make	Vehicle model	Shoulder belt anchorage position	Floor mount type	Up to 85 kg - CLASSIC Line	Up to 85 kg - EVOLUTION Line	Up to 170 kg - HEAVY DUTY Line	Up to 200 kg - HEAVY DUTY Line	
Renault	Master X62	C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		W	surface	501942	501885			
		W	flush	501943	501886			
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
	Trafic X82	C	surface	502057	503170	503136	503135	
		C	flush	502058	503171	503497	503488	
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
		Trafic X83	C	surface	502057	503170	503136	503135
		C	flush	502058	503171	503497	503488	
Toyota	Proace	C	surface	502057	503170			
		C	flush	502058	503171			
		W	surface	501949	501057			
		W	flush	501948	501055			
		RD	surface	501771	503293			
		RD	flush	501799	503294			
	ProAce/Verso 2017-	C	surface		503296	503473	503472	
		C	flush		503295	503475	503474	
		RD	surface	501771	503293	503297	503299	
		RD	flush	501799	503294	503298	503300	
		ProAce/Verso 2017- Freedom Drop Floor Conversion	C (roof)	surface			503664	
VW	Caddy, ITEK drop floor conversion Crafter (2006-2016)	RD	surface		503239			
		W	surface	501679	503482			
		W	flush	501932	500814			
		D	surface	502057	503170			
		D	flush	502058	503171			
		RD	surface		500114	500116	500118	
	Crafter (2006-2016) High Roof, Wheel base 3250-3665-4325	RD	flush		500115	500117	500119	
		W	surface	502063	500726			
		W	flush	502062	500729			
		Crafter 2017-	C	surface	503162	503133	503490	503496
		C	flush	503163	503131	503489	503493	
		W	surface	503164	503132	503491	503494	
		W	flush	503165	503130	503492	503495	
		D	surface	502057	503170	503136	503135	
		D	flush	502058	503171	503497	503488	
		RD	surface		500114	500116	500118	
		RD	flush		500115	500117	500119	
		T5 & T6	C	surface	502057	503170	503136	503135
	C		flush	502058	503171	503497	503488	
	W		surface	501774	501772			
	W		flush	501786	501773			
	D		surface		503170	503136	503135	
	D		flush		503171	503497	503488	
	RD		surface	501771	503293	503297	503299	
RD	flush		501799	503294	503298	503300		
RD	surface			503352				
RD	flush			503353				
T5 & T6 Multivan, original floor rails	RD		surface		503122	503499	503498	
T5 & T6 Colorado, GM Coachwork drop floor conversion	C		surface	502289	503476	503478	503479	
	C	flush	502290	503477				

## Explanation of symbols for kits with 4-point WTORS

Floor pocket or rail for surface installation

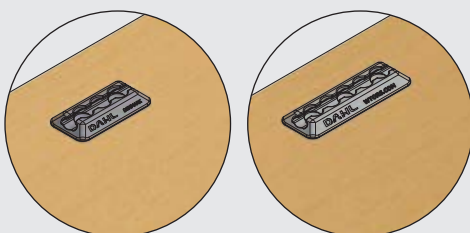

Floor pocket or rail for flush installation

