

# List of vehicles with approved installation kits – 4-point WTORS

Vehicle make	Vehicle model	Shoulder belt anchorage position	Floor mount type	Up to 85 kg - CLASSIC Line	Up to 85 kg - EVOLUTION Line	Up to 200 kg - HEAVY DUTY Line
Citroën	Berlingo Tripod/Allied Floor Conversion	RD			503463	503464
	Jumper Y	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		W	surface	501945	503483	
		W	flush	501944	502111	
	right side	RD	surface		503736	503604
	right side	RD	flush		503738	503624
	left side	RD	surface		503739	503625
	left side	RD	flush		503737	503605
	Jumpy X	C	surface	502057	503170	
		C	flush	502058	503171	
		W	surface	501949	501057	
		W	flush	501948	501055	
		RD	surface	501771	503293	
		RD	flush	501799	503294	
	Space Tourer/Jumpy KO 2017-	C	surface		503296	503472
		C	flush		503295	503474
	RD	surface	501771	503293	503299	
	RD	flush	501799	503294	503300	
Space Tourer/Jumpy KO 2017- Freedom Drop Floor Conversion	C (roof)	surface				
Fiat	Doblo High roof SWB&LWB	D	rail	502311	503312	
		D	rail	502317	501869	
		D	surface		502373	503560
		D	flush		502372	503562
	Ducato X250	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		W	surface	501945	503483	
		W	flush	501944	502111	
	right side	RD	surface		503736	503604
	right side	RD	flush		503738	503624
	left side	RD	surface		503739	503625
	left side	RD	flush		503737	503605
	Scudo X270	C	surface	502057	503170	
		C	flush	502058	503171	
		W	surface	501949	501057	
		W	flush	501948	501055	
		RD	surface	501771	503293	
	RD	flush	501799	503294		
Talento	C	surface	502057	503170	503135	
	C	flush	502058	503171	503488	
	D	surface	502057	503170	503135	
	D	flush	502058	503171	503488	
Ford	Transit Custom V362	C	surface	502057	503170	
		C	flush	502058	503171	
		W	surface	501947	503486	503135
		W	flush	501946	503487	503488
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
		RD	surface	501771	503293	
		RD	flush	501799	503294	
	Transit V363	C	surface	502056	501054	
		C	flush	502055	501053	
	W	surface	502060	501051		
	W	flush	502059	501050		
	D	surface	502057	503170		
	D	flush	502058	503171		
MAN	TGE 2017-	C	surface	503162	503133	503496
		C	flush	503163	503131	503493
		W	surface	503164	503132	503494
		W	flush	503163	503130	503495
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
		RD	surface		500114	500118
	RD	flush		500115	500119	
Mercedes	Sprinter 906 & 907 & 910	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		W	surface	501679	503482	500826
		W	flush	501932	503484	500827
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
		RD	surface		500114	500118
	RD	flush		500115	500119	

SYMBOLS: C = c pillar / D = d pillar / W = window / RD / rear door / surface = surface mount / flush = flush mount / rail = floor rail

# List of vehicles with approved installation kits – 4-point WTORS

Vehicle make	Vehicle model	Shoulder belt anchorage position	Floor mount type	Up to 85 kg - CLASSIC Line	Up to 85 kg - EVOLUTION Line	Up to 200 kg - HEAVY DUTY Line
Mercedes	Sprinter 906 & 907 High roof, wheel base 3250-3665-4325	W	surface	502063	500726	
		W	flush	502062	500729	
	Vito & V-Class W447	W	surface	502241	503485	
		W	flush	502239	503524	
		RD	surface	501771	503293	
		RD	flush	501799	503294	
	Vito 639 & V-Class W447	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		W	surface	501821	501789	
		RD	surface	501771	503293	503299
Nissan		RD	flush	501799	503294	503300
		RD	surface		503358	
		RD	flush		503357	
	Nissan NV 200	W	surface	501947	503486	
		W	flush	501946	503487	
		RD	surface		503187	
	Nissan NV 300	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
	Nissan NV400	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		W	surface	501942	501885	
		W	flush	501943	501886	
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
	Nissan Primastar	C	surface	502057	503170	
		C	flush	502058	503171	
	D	surface	502057	503170		
	D	flush	502058	503171		
Opel	Combo High roof SWB&LWB	D	surface		502373	503560
		D	flush		502372	503562
		D	rail	502311	503312	
		D	rail	502317	501869	
	Movano X62	W	surface	501942	501885	
		W	flush	501943	501886	
		C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
	Vivaro X82	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
	Vivaro X83	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
	Zafira Life	C	surface		503296	503472
		C	flush		503295	503474
	RD	surface	501771	503293	503299	
	RD	flush	501799	503294	503300	
Zafira Life - Freedom drop floor conversion	C (roof)	surface				
Peugeot	Boxer Y	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		W	surface	501945	503483	
		W	flush	501944	502111	
	right side	RD	surface		503736	503604
	right side	RD	flush		503738	503624
	left side	RD	surface		503739	503625
	left side	RD	flush		503737	503605
	Expert X	C	surface	502057	503170	
		C	flush	502058	503171	
		W	surface	501949	501057	
		W	flush	501948	501055	
		RD	surface	501771	503293	
		RD	flush	501799	503294	
	Partner Tripod/Allied floor conversion	D	surface		503463	503464
	Traveller/Expert KO 2017-	C	surface		503296	503472
		C	flush		503295	503474
		RD	surface	501771	503293	503299
	RD	flush	501799	503294	503300	
Traveller/Expert KO 2017- Freedom Drop Floor Conversion	C (roof)	surface				


SYMBOLS: C = c pillar / D = d pillar / W = window / RD / rear door / surface = surface mount / flush = flush mount / rail = floor rail

# List of vehicles with approved installation kits – 4-point WTORS

Vehicle make	Vehicle model	Shoulder belt anchorage position	Floor mount type	Up to 85 kg - CLASSIC Line	Up to 85 kg - EVOLUTION Line	Up to 200 kg - HEAVY DUTY Line
Renault	Master X62	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		W	surface	501942	501885	
		W	flush	501943	501886	
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
	Trafic X82	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
		C	surface	502057	503170	503135
		C	flush	502058	503171	503488
	Trafic X83	C	surface	502057	503170	503135
		C	flush	502058	503171	503488
D		surface	502057	503170	503135	
D		flush	502058	503171	503488	
C		surface	502057	503170	503135	
C		flush	502058	503171	503488	
Toyota	Proace	C	surface	502057	503170	
		C	flush	502058	503171	
		W	surface	501949	501057	
		W	flush	501948	501055	
		RD	surface	501771	503293	
	ProAce/Verso 2017-	RD	flush	501799	503294	
		C	surface		503296	503472
		C	flush		503295	503474
		RD	surface	501771	503293	503299
		RD	flush	501799	503294	503300
VW	Caddy, ITEK drop floor conversion Crafter (2006-2016)	C (roof)	surface			
		RD	surface		503239	
		W	surface	501679	503482	500826
		W	flush	501932	500814	500827
		D	surface	502057	503170	
		D	flush	502058	503171	
	Crafter (2006-2016) High Roof, Wheel base 3250-3665-4325 Crafter 2017- T5 & T6	RD	surface		500114	500118
		RD	flush		500115	500119
		W	surface	502063	500726	
		W	flush	502062	500729	
		C	surface	503162	503133	503496
		C	flush	503163	503131	503493
		W	surface	503164	503132	503494
		W	flush	503165	503130	503495
		D	surface	502057	503170	503135
		D	flush	502058	503171	503488
		RD	surface		500114	500118
		RD	flush		500115	500119
		C	surface	502057	503170	503135
		C	flush	502058	503171	503488
W	surface	501774	501772			
W	flush	501786	501773			
D	surface		503170	503135		
D	flush		503171	503488		
RD	surface	501771	503293	503299		
RD	flush	501799	503294	503300		
RD	surface		503352			
RD	flush		503353			
T5 & T6 Multivan, original floor rails	RD	surface		503122	503498	
T5 & T6 Colorado, GM Coachwork drop floor conversion	C	surface	502289	503476	503479	
	C	flush	502290	503477		

## Explanation of symbols for kits with 4-point WTORS

Floor pocket or rail for surface installation

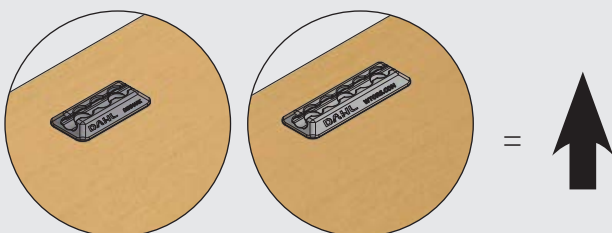

Floor pocket or rail for flush installation

