

# 4 POINT WHEELCHAIR AND OCCUPANT RESTRAINT SYSTEM

This system is suitable for wheelchairs with a mass of 85 kg + user.

### **SECURING WHEELCHAIR**

Recommendations for Clear Zones on page 2.

- Drive wheelchair into position facing forward. Be aware of Frontal Clear Zones. Lock wheelchair brakes or switch off the power to the electric wheelchair.
- Anchor the four retractors into the floor pockets. Be aware of a distance of 115-145cm between the front and rear retractors when using rails.
- 3. Push release pin (C) to pull out the webbing of each retractor and attach hooks at an angle of 30-45 degrees with floor.
- Remove webbing slack by manually tensioning the webbing with retractor knobs (not applicable when using automatic retractables).

### SECURING PASSENGER


- Pull the shoulder belt over the occupant's chest and insert the seat belt (B) tongue into both seat belt buckles.
- 2. Adjust shoulder belt height so that the belt rests on the shoulder.


### RELEASING PASSENGER


- 1. Unbuckle the seat belt on both sides of the wheelchair.
- 2. Hang up seat belt end tongue on plastic hook (5) to keep excess webbing of the ground when not in use.


### **RELEASING WHEELCHAIR**

- Press on the release pin (C) on retractors to slacken the webbing and detach hooks from wheelchair and return them to retractors.
- 2. Remove all retractors from the floor anchorage and store safely.
- 3. Unlock wheelchair brakes or switch power on electrical wheelchair.

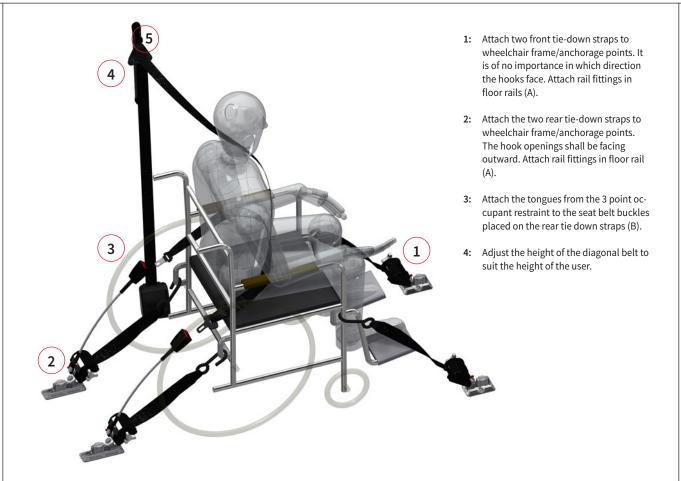

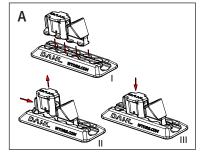

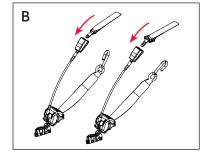

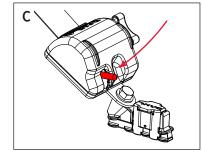

### MAINTENANCE & CARE

- Belt webbing should not be worn or twisted and must be protected against contact with sharp edges and corners.
- Safety belts must be inspected and cleaned regularly. Replace belts or straps that have faded in the sun, are worn at the edges, have tears or show clear signs of wear. Components that are damaged or worn must also be replaced. Avoid soiling the belts with chemicals, polishing agents, oil or, in particular, battery acid.
- Clean the belts by hand with hot water and mild soap. Rinse thoroughly with water and allow to dry in the shade. Do not expose the belts to direct sunlight and never use powerful cleaning agents.
- Only moving metal parts that are not in contact with belt webbing should be lubricated with light oil when necessary and if so, very carefully. Never lubricate inertia reels or other components that are part of the safety belt. Never let the belt webbing come into contact with oil or grease.



Please also refer to our separate vehicle specific instructions for installation and use.



# 4 POINT WHEELCHAIR AND OCCUPANT RESTRAINT SYSTEM


This system is suitable for wheelchairs with a mass of 85 kg + user.


## **WARNINGS**

Make sure to read, understand and follow all these instructions.

- This WTORS must only be used with wheelchair facing forward in the vehicle and only for one wheelchair and one occupant.
- The 4-point WTORS systems from DAHL comply with the standards and safety regulations EU-framework directive 2007/46, regulation 214/2014 annex 3, as well as ISO 10542-1:2012
- We offer crash-tested systems which have been dynamically tested at 48kmh, 20g, with a surrogate wheelchair with a mass of respectively 85kg, 170kg and 200kg. The fitter is responsible for ensuring that the system used is rated for the weight of the wheelchair and it satisfies all statuatory requirements. Contact local/national authorities if there is any doubt in this regard.
- The WTORS systems from DAHL and all its components must be checked and maintained regularly.
- In the event that the instructions and warnings in this guide are not followed, or WTORS
  installed incorrectly, there is a risk of death or serious injury to the wheelchair user and the
  other passengers in the vehicle.
- Never begin driving the vehicle whilst a wheelchair is being secured or if the user's safety belt is not secured.
- Never transport users in wheelchairs if certified WTORS are not used.
- The lap belt should make full contact with the front of the body in the area where the pelvis
  and thighbone meet. Use only Dahl WTORS or e-(ECE), E-(EU) or ISO 10542 certified safety
  belts for securing occupants of the vehicle. Safety belts must not be held away from the
  body by wheelchair components or parts such as armrests.
- Do not pass tiedowns or restraints through the wheels of the wheelchair.
- Do not attach components to weak/non-solid components or materials.
- An airbag should be deactivated if the user is situated less than 300 mm from the airbag, or as recommended by the vehicle manufacturer. An airbag should also be deactivated if subsequently installed parts block or have an effect on its inflation/expansion.
- WTORS components, inclusive anchorages, which have been involved in a collision from
  which the vehicle has had to be towed away must be replaced without separating the
  components, because they can have obtained invisible damages.
- The user should never try to repair, adjust or modify the WTORS components. Alterations
  and modifications to the system or replacement with non-original Dahl components are not
  advisable. Any alterations carried out without prior agreement with Dahl Engineering are
  entirely the responsibility of the fitter and/or the user.
- Contact Dahl Engineering or your dealer if there is any doubt concerning the use or installation of the product or if the product has faults or non-conformities.

## Recommendations for clear zones

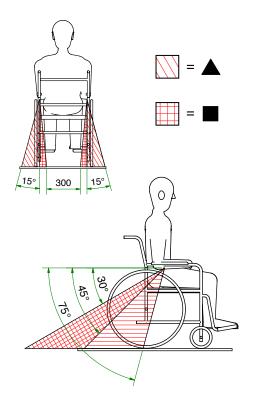

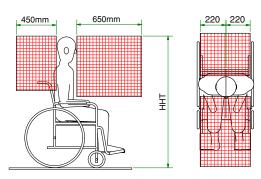


### SAFETY BELTS

Only use Dahl WTORS or e-(ECE), E-(EU) or ISO 10542 certified safety belts for securing occupants of the vehicle. Please refer to Dahl Engineering's product catalogue containing WTORS and certified safety belts.

### Preferred and optional angles for location of the lap belt:

- ▲ = Preferred Zone
- = Optional Zone

Safety belts must not be held away from the body by wheelchair components or parts such as armrests or wheels.

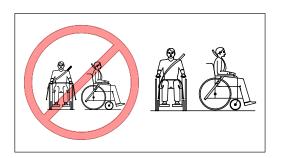

Clear zones are recommended areas in which hard or sharp installation components or objects should not be placed. The clear zone recommendations in ISO 10542 are based on the way in which an occupant moves during a crash/collision. To reduce the risk of injuries to the head and chest, hard vehicle components and parts for WTORS which lie within the clear zones should be covered with padding that meets the requirements with regard to the hardness of materials as specified in FMVSS 201, ECE regulation no. 21 or EU directive 74/60.

The wheelchair and user must be placed facing forward in the vehicle.